




# Samsung Series 5 Ultrabook Battery Replacement

This guide will show how to replace the battery in the Samsung Series 5 Ultrabook.

Written By: Timothy

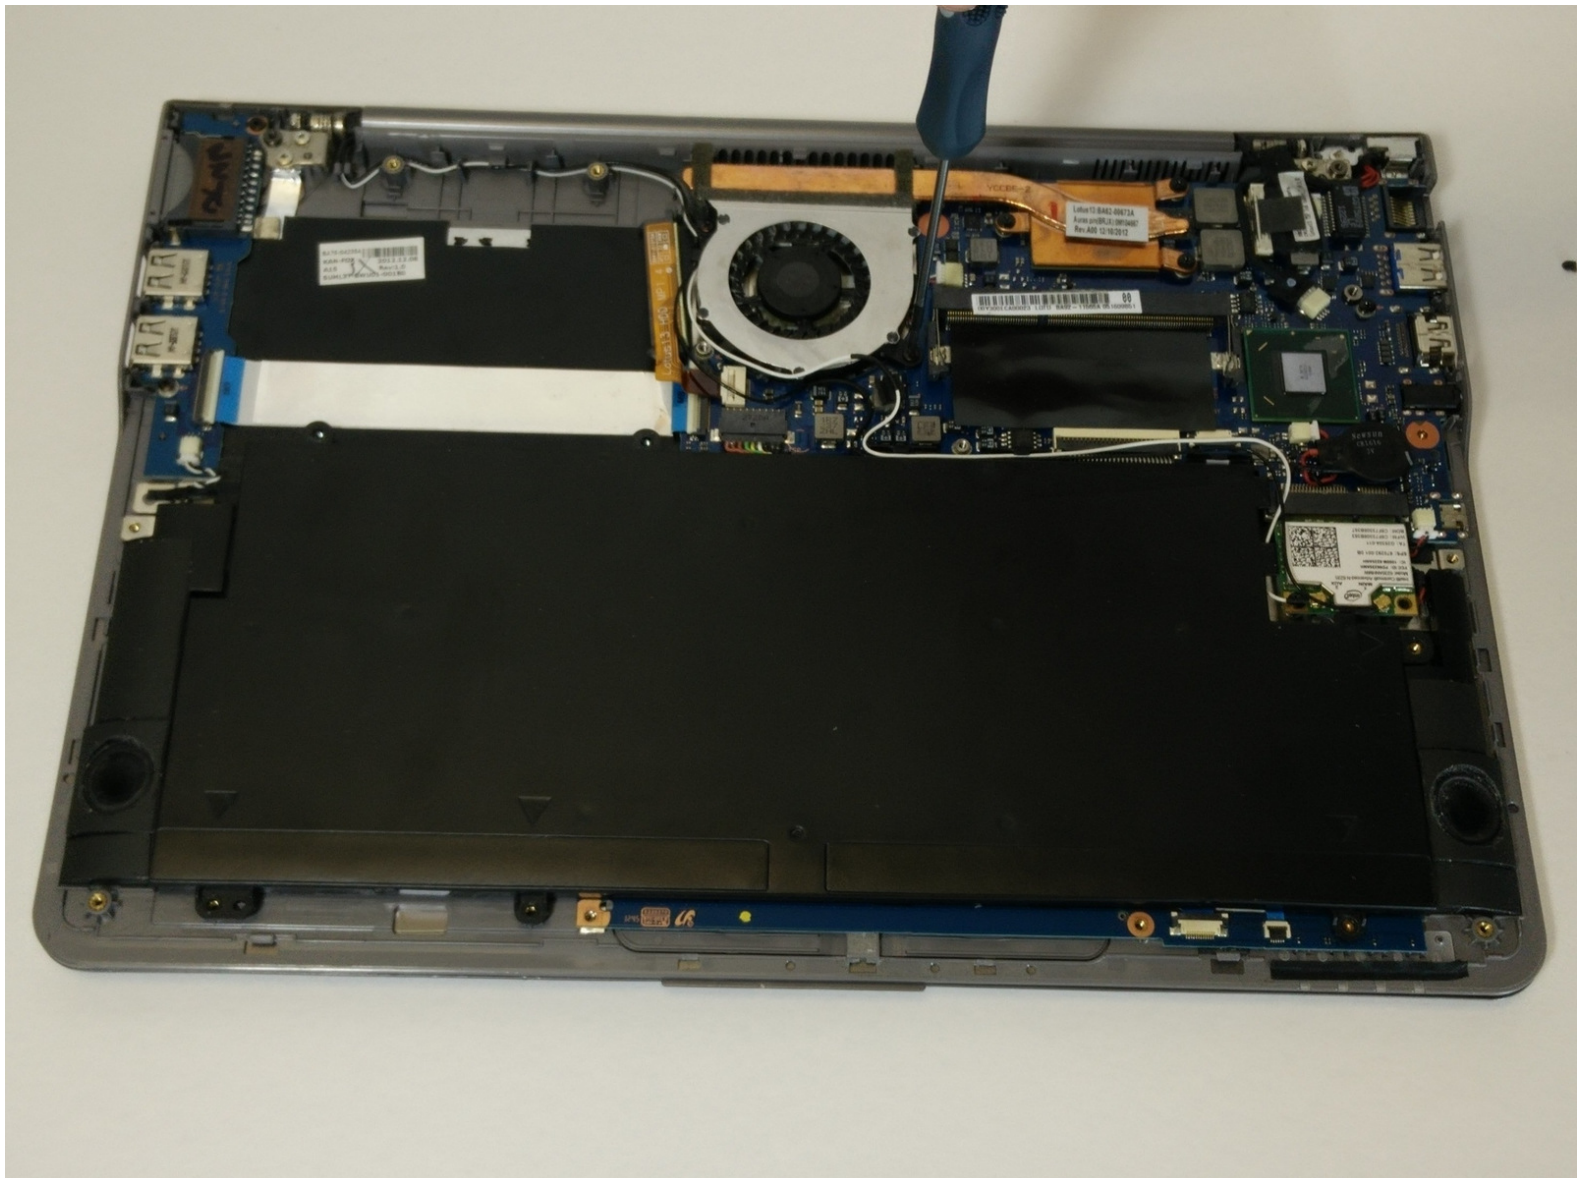

## INTRODUCTION

This guide will show how to remove the covers from the underside of the laptop, remove the battery, and replace it with the new battery.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)




### PARTS:

- [New battery](#) (1)

## Step 1 — Remove the Hard Drive Cover



 Before beginning, make sure the laptop is completely powered off and it is not being charged via the power cord.

- Remove the single screw holding the hard drive cover in place. This screw is 6.7 mm long.
- Take off the cover using the built-in lips for leverage.

## Step 2 — Remove the Screws on the Back Cover



- Remove the rest of the screws holding the entire back cover in place. There are 13 of these screws. These are 4.0 mm long.
- Remove the screws holding the cover on from under the hard drive cover. These are 6.7 mm long.




### Step 3 — Remove the Rubber Pads



- Remove the rubber pads near where the hard drive cover was using a sharp pair of tweezers.
- Unscrew the 4 mm screws underneath these pads.

### Step 4 — Remove the Back Cover

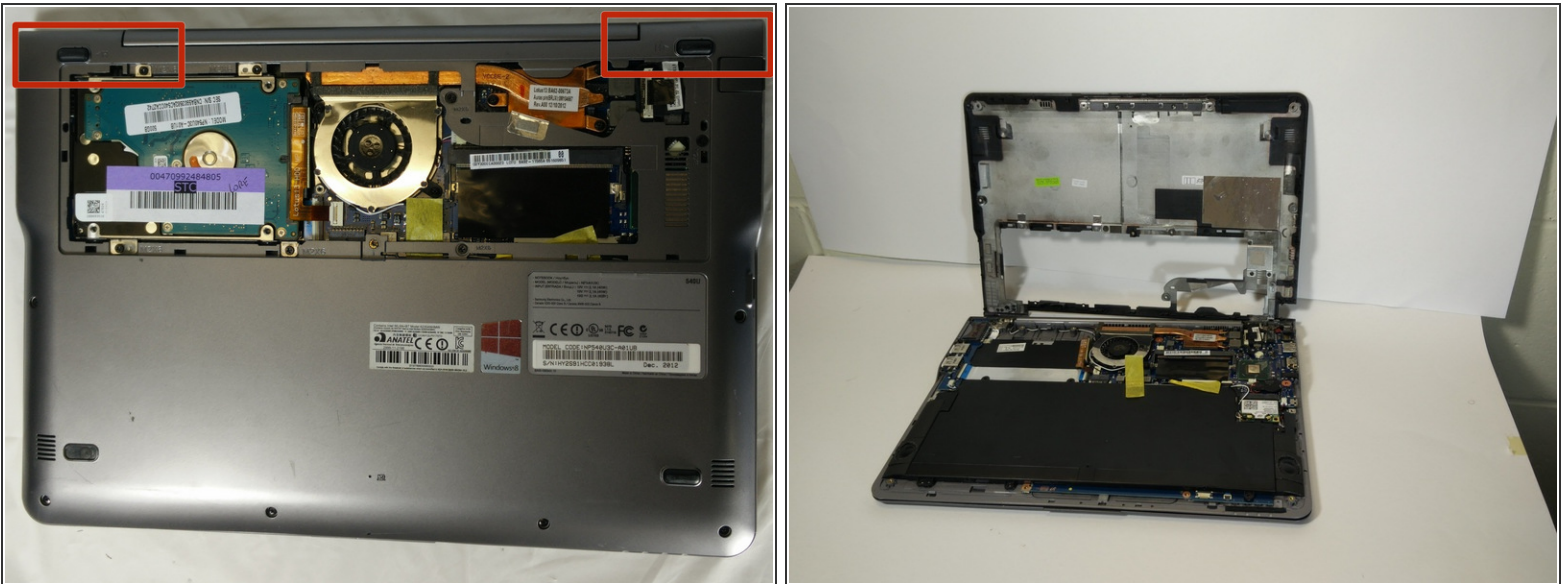


- Remove the entire rest of the back cover.
- ⚠ There are snaps that hold the cover near the fan in place. Be careful not to break these.

## Step 5



- Remove the tape holding the wires in place.
- Unscrew the four 4.5 mm screws holding the battery in place.
- Unscrew the two 6.7 mm screws at the top of the battery.

## Step 6 — Remove the Battery

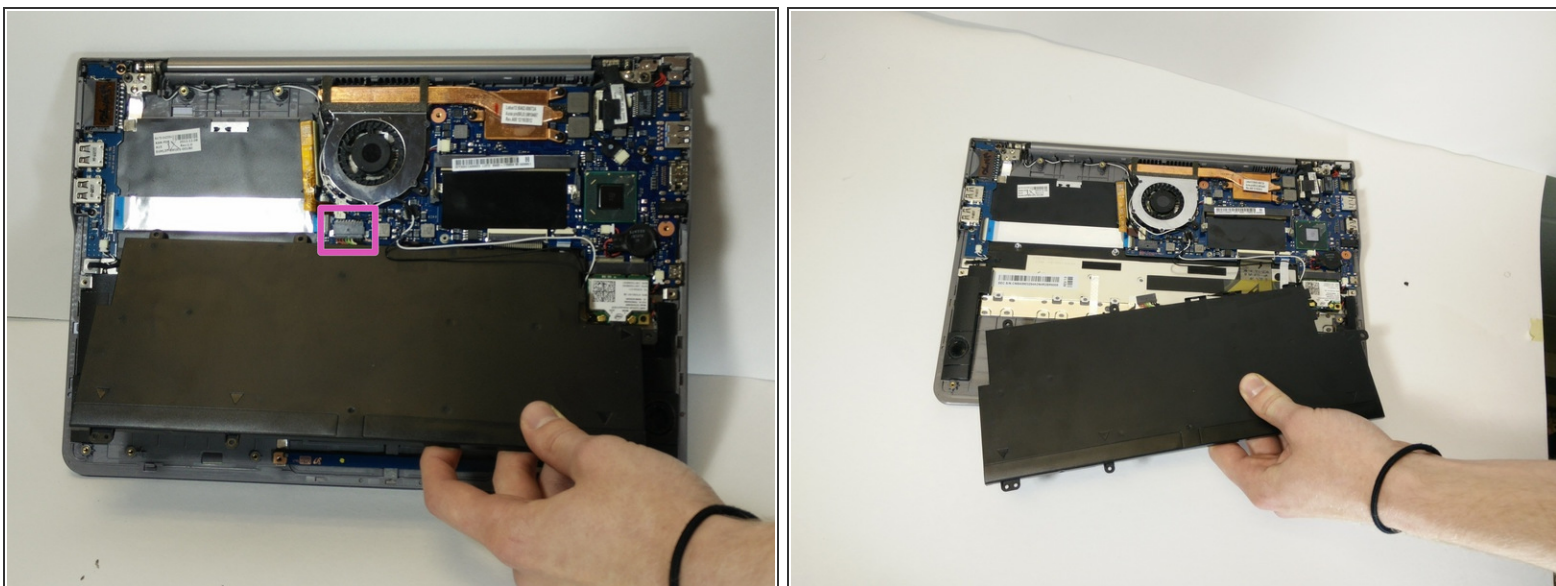

- Unplug the battery from the motherboard.
- Remove the battery from its position on the underside of the laptop.

To reassemble your device, follow these instructions in reverse order.

